

NEW!

ERGOTECH Line by IMPACTO®

IMPACTO's acquisition of Ergotech Protective Devices Inc. became effective April 18, 2011 expanding IMPACTO's footprint in the industrial ergonomics and safety fields. Ergotech now operates as a division of IMPACTO. Ergotech's customers should be assured of the continuation of a quality product and the technical expertise to which they are accustomed to. With the additional support from IMPACTO staff, Ergotech customers will now enjoy increased service throughout North America as well as access to a large variety of related new products.

#ER501 Anti-Impact Glove Liner Palm Pad



Cotton polyester Lycra®, designed to be worn under work glove. Provides finger dexterity with Sorbothane® palm padding.

XS - XL UOM: PR, LH, RH

#ER502 Anti-Impact Glove Palm Pad



Nylon Lycra Spandex with black suede leather patch. Provides finger dexterity with Sorbothane palm padding.

XS - XL UOM: PR, LH, RH

#ER502LS Anti-Impact Palm/Web Pad



Nylon Lycra Spandex with black suede leather patch. Provides finger dexterity, Sorbothane palm & thumb web pad.

S - XL UOM: PR, LH, RH

#ER502M8 Anti-Impact Glove Palm/Side



Nylon Lycra Spandex with black suede leather cover. Sorbothane 1/8" palm pad extended to the side and back of the hand.

S - XL UOM: PR, LH, RH

#ER504 Anti-Impact Glove Palm Pad



3/4 finger, Nylon Lycra with black leather. Sorbothane 1/8" pad in the palm, thumb and to first finger joints. Worn for both palm or back protection.

S - XL UOM: PR, LH, RH

#ER505 Anti-Impact Liner Palm Pad




3/4 finger, nylon Lycra Spandex worn under work glove. Sorbothane 1/8" pad in the palm, thumb and to first finger joints. For wet conditions.

S - XL UOM: PR, LH, RH




#ER502M4 Anti-Impact Glove
Nylon Spandex with black suede cover. Sorbothane 3/16" palm pad extended to the side and back of the hand.

S - XL UOM: PR, LH, RH

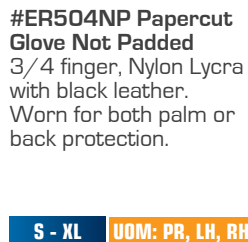

#ER504NP Papercut Glove Not Padded
3/4 finger, Nylon Lycra with black leather. Worn for both palm or back protection.

S - XL UOM: PR, LH, RH

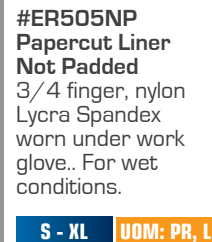

#ER505NP Papercut Liner Not Padded
3/4 finger, nylon Lycra Spandex worn under work glove.. For wet conditions.

S - XL UOM: PR, LH, RH

#ER509 Anti-Impact w/Wrist Support



Half finger, nylon Lycra spandex, black suede. Dimple Sorbothane in the palm and thumb web for grip. Detachable padded elastic wrist restrainer.

S - XL UOM: PR, LH, RH

#ER605CP Anti-Impact Glove Liner Full Finger



Cotton Polyester Lycra, worn under work glove. Flexible dimple Sorbothane palm, thumb and full fingers.

S - XL UOM: PR, LH, RH

#ER605N Anti-Impact Liner Full Finger




Nylon Lycra Spandex, worn under work glove. Flexible dimple Sorbothane palm, thumb, full fingers and thumb web area.

S - XL UOM: PR, LH, RH




#ER1000 WRISAVER
Seamless cotton polyester knit. Sorbothane palm. Wrist support padded, hook/loop closure.

S - XL UOM: EA

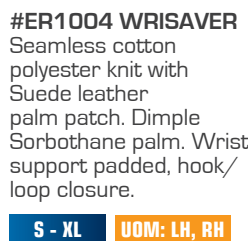

#ER1004 WRISAVER
Seamless cotton polyester knit with Suede leather palm patch. Dimple Sorbothane palm. Wrist support padded, hook/loop closure.

S - XL UOM: LH, RH

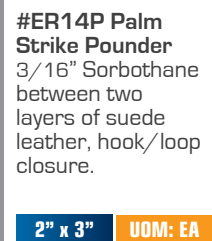

#ER14P Palm Strike Pounder
3/16" Sorbothane between two layers of suede leather, hook/loop closure.

2" x 3" UOM: EA

www.impacto.ca

www.ergotech.ca



IMPACTO®
Protective Products Inc.

ERGOTECH, a Division of IMPACTO PROTECTIVE PRODUCTS INC.

E-mail: impacto@impacto.ca • sales@ergotech.ca

N. America 888-232-0031 • UK free call 0800 0280 243

Tel 613 966 0062 • Fax 613 966 0067

PO Box 524 • 40 Dussek St. • Belleville • ON • K8N 5B2 Canada



ERGOTECH Line by IMPACTO®



ERGOTECH, a Division of IMPACTO PROTECTIVE PRODUCTS INC.

www.ergotech.ca • 888-232-0031



www.impacto.ca

#ER402 Cushioned Elbow Protector


Pull-on style, contoured 1/2" closed cell foam, knit with Rayon cover. Protects from pressure point irritation.



S - L **UOM: EA**

#ER2000 Anti-Vibration Seat Cushion

Sorbothane 3/16" between high resiliency foams helps reduce the incidence of "whole body vibration" transmitted to the body through the buttocks. Flame laminated foam on brushed nylon, elastic strap, 18"x18" x 2 1/4".

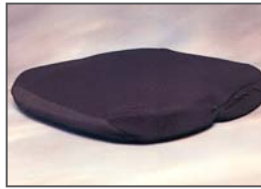

#ER1520 Tennis Elbow Support

With compression pad and adjustable arm strap. Provides relief from inflammation of the elbow by limiting the extent to which forearm muscles contract.



S - L **UOM: EA**

#ER800 Inside Garment Knee Pad

Molded Sorbothane cap cover provides positive impact protection. Elasticized fabric with knit cotton lining for a smooth, comfortable fit.



ONE SIZE **UOM: EA**

#ER802 Outer Garment Knee Pad

Sorbothane® kneecap cover over a molded closed cell foam pad. Nylon Lycra® with suede leather cover. Dual elastic straps, hook/loop closure.



ONE SIZE **UOM: EA**

#ERSM Sorbothane Soft Blow Mallet

Reduces marring and damage during assembly applications. Conforms to surface irregularities, High impact & shock absorption.



2.5"x4" **UOM: EA**

#ERINWRK Ultra Work-Sport® Insole

Molded, cupped heel and molded arch for stability along with Sorbothane inserts. Fabric cover. Works well with athletic shoes, work shoes and boots.




#ERINWAL SorboAir® Insole

Molded, designed for the fitness minded, 100% air-infused Sorbothane from heel-to-toe. Contoured, provides lightweight support and superior Sorbothane protection.



#ERINGEL SorboGel® Flat Insole

For people who spend a lot of time on their feet or experience discomfort and fatigue from conditions such as diabetes. Incorporates airflow channels for comfort.

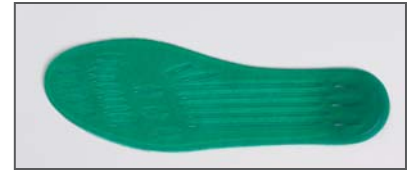

#ERINSOR SorboLite® Comfort Insole

Molded, for all day, everyday shock protection, trim-to-fit multi-purpose insole reduces pain in the feet, knees, hips and lower back.

#ERINSORM - men's

#ERINSORW - women's



#ERSORBOGRIP Tool Handle Cover Kits

Help reduce fatigue and the potential harmful effects from vibrations associated with tools and power devices before it reaches the hand.

Made of 0.1" Sorbothane bonded with rugged, non-slip Toughtek® cover. Effective in wet or dry, hot or cold conditions.

#ERSG0406 - 4"x 6"

#ERSG0608 - 6" x 8"

#ERSG2606 - 2-6" x 6"



SILENT FEET Anti-Vibration Pads

Made with Sorbothane to reduce vibration and noise from appliances.

#SILENTFEET - for small laundry rooms in carpet, concrete, rough stone and natural tile

#SILENTFEETAW - Anti-Walk for stackable washing and dryers in smooth and high gloss floors like tile, polished stone, wood and vinyl.



GLOVES SIZING

Measure the hand circumference across the knuckles at the base of the fingers. For gloves with wrist support, use glove sizing. When ordering it is best to order smaller than your normal size.

| SIZE | HAND | HAND CIRCUMFERENCE | |
|------|------|--------------------|-----------------|
| XS | 6 | 6" - 7" | 12.7 - 15.2 cm. |
| S | 7 | 7" - 8" | 15.2 - 17.8 cm. |
| M | 8 | 8" - 9" | 20.3 - 22.9 cm. |
| L | 9 | 9" - 10" | 25.4 - 27.9 cm. |
| XL | 10 | 10" - 11" | 30.5 - 33.0 cm |
| XXL | 11 | 11" + | 33.0 cm + |

INSOLES SIZING

Use shoe size. Trim for perfect fit.

| SIZE | USA men | USA women | UK |
|------|-------------|-------------|-------------|
| AA | | 4.5 - 5.5 | |
| A | | 6 - 7 | |
| B | 5 - 6 | 7.5 - 8.5 | 4.5 - 5.5 |
| C | 6.5 - 7.5 | 9 - 10 | 6 - 7 |
| D | 8 - 9 | 10.5 - 11.5 | 7.5 - 8.5 |
| E | 9.5 - 10.5 | 12 | 9 - 10 |
| F | 11 - 12 | | 10.5 - 11.5 |
| G | 12.5 - 13.5 | | 12 - 13 |
| H | 14 - 15 | | 13.5 - 15 |

DISTRIBUTED BY